

MATECH

BrightBar Remote

取扱説明書 2

兼保証書

Operation Manual ... 20

with warranty card



このたびは、お買い上げいただき、まことにありがとうございます。
 ます。

- ・使用前に必ず本書、および本書の「安全上の注意」(P.3～5)をよくお読みください。
- ・本書は保証書を兼ねています。「お買い上げ日・販売店名」などをご記入のうえ、お読みになった後も大切に保管してください。

もくじ

安全上の注意.....	3	困ったときは.....	15
各部の名称.....	6	仕様.....	16
使用上の注意.....	7	保証とアフターサービス...	17
使いかた.....	8	製品登録による延長保証...	18
リモコンの使いかた.....	11	保証書.....	19
お手入れ.....	14		

安全上の注意

最初に、この「安全上の注意」をよく読んでいただき、正しく使用してください。人への危害や、財産への損害を未然に防止するため、必ず守る必要があることを説明しています。

記号の意味

	禁止を示す記号です。具体的な禁止内容は、図記号の中や近くに絵や文章で示します。
	必ず行うことを示す記号です。具体的な指示内容は、図記号の中や近くに絵や文章で示します。



注意

誤った取り扱いをすると、人がけがをしたり、物的損害が発生するおそれがある内容を示しています。



分解禁止

分解・修理・改造しない

火災・感電・けがの原因になります。

修理については、お買い上げの販売店へお問い合わせください。

コイン電池は絶対に分解しない

皮膚や衣服を損傷することがあります。



USBケーブル以外で接続しない

USB端子以外に接続しない

火災・感電の原因になります。




逆さまに取り付けない

前端が丸や斜めになっている面には取り付け
ない

強度のないところに取り付けない

落下してけがをする原因になります。



モニターの画面をはさまない

モニターに取り付けるときは、本製品のクランプではさめる幅のベゼルがあることを確認してください。画面部分まではさむと、画面の破損の原因になります。

コイン電池は、金属製の小物と一緒に携帯・保管しない

ショートして破裂や液もれの原因になることがあります。

コイン電池は幼児の手の届くところに置かない

誤飲の原因になります。万一、電池を飲み込んだ場合は、ただちに医師に相談してください。

リモコンに、指定以外の電池を使用しない

破裂・液もれにより、火災やけが、周囲を汚損する原因になることがあります。




コイン電池は絶対に充電しない

破裂・液もれにより、火災・けが・やけどの原因になります。



取り付け時は、クランプ部の前方を取り付け部にぴったり寄せる

すき間があると、ぐらついて落下の原因になります。



すき間を空けない

リモコンにコイン電池を入れるときは、極性表示（プラス $\oplus$ とマイナス $\ominus$ の向き）に注意し、説明書の通りに正しく入れる

まちがえると、破裂・液もれにより、火災やけが、周囲を汚損する原因になります。


長期間使用しないときはコイン電池を取り出しておく

液がもれて、火災やけが、周囲の汚損の原因になります。


液がもれた場合は、電池ケースについた液をよく拭き取ってから、新しい電池を入れてください。万一、もれた液が身体についたときは、水でよく洗い流してください。

各部の名称

■ 正面

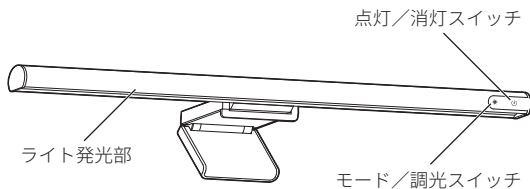


■ 背面

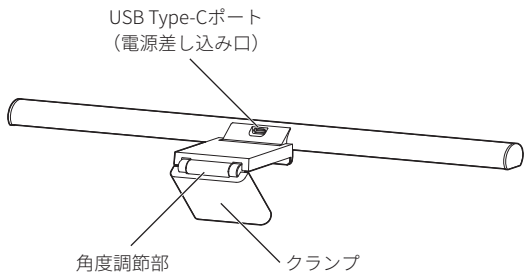

■ 付属品

USB Type-A⇔Type-Cケーブル (1.5m)



リモコン

コントロールノブ



滑り止めシート (底面)


使用上の注意

- ・ 本製品は防水仕様ではありません。
水がかからないように注意してください。またぬれた手で触れないでください。
- ・ 海岸など、塩分の多い環境での使用は避けてください。
- ・ 屋外で使用しないでください。
- ・ ケーブルを抜き差しするときは、必ずプラグを持ってください。ケーブルを引っ張ると断線の原因になります。
- ・ 電子レンジや無線機器の近くでは、誤動作する場合があります。
- ・ USB Type-C⇔Type-Cケーブルは使用できません。必ず付属のものなど、USB Type-A⇔Type-Cケーブルを使用してください。


使いかた

1 モニターに取り付ける

- ・ クランプ後部を広げ、クランプ前部をモニター前端に引っ掛けて、モニター上部を挟むようにして取り付けてください。

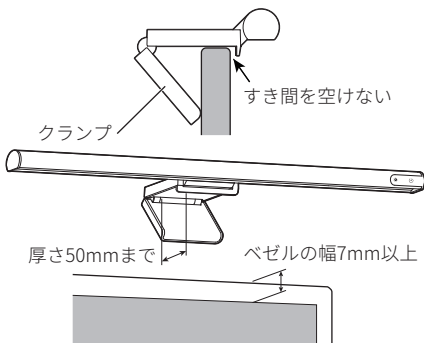

2 電源と本機をUSBケーブルで接続する

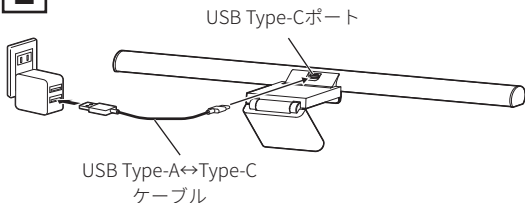


- ・ 通電すると、操作スイッチのランプが点灯します。



ボタンの中が点灯

3

点灯／消灯スイッチにタッチして点灯する



- ※ 点灯中に点灯／消灯スイッチにタッチすると、消灯します。

■ モードの切り替え

- ・ モード／調光スイッチにタッチするたびに、次のように点灯のモードが変わります。




→ 白色 → 電球色 → 混合色 →

- ・ 消灯しても、次に点灯したときは同じモードで点灯します。


■ 明るさの調節

- ・ モード／調光スイッチを長押しすると、明るさを調節できます。



■ 角度調節

- ・ ライトは、前後40°の範囲で角度を調節することができます。後ろのクランプ部を押さえながらライト部分を動かしてください。

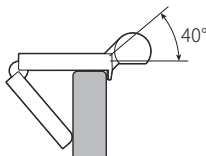


リモコンの使いかた

- ・ リモコンの底には滑り止めシートがついています。
机の上などに置いて使うことができます。

■ 点灯／消灯

- ・ コントロールノブを押すと、ライトが点灯します。



→ ライト点灯


- ・ コントロールノブを長押しすると、ライトは消灯します。



→ ライト消灯

■ モードの切り替え

- ・ ライト点灯中にコントロールノブを押すたびに、点灯のモードが変わります。



→ 白色 → 電球色 → 混合色 →

- ・ 消灯しても、次に点灯したときは同じモードで点灯します。

■ 明るさの調節

- 点灯中に、コントロールノブを時計回りに回すとライトが明るくなり、反時計回りに回すと暗くなります。



■ 本体とのペアリング

- 付属のリモコンは、ライト本体とペアリングして出荷されます。
ペアリングが切れたりした場合は、以下のようにして再ペアリングしてください。

ライト本体の電源を入れて10秒以内に、リモコンのコントロールノブを長押しする



- ペアリングが成功すると、ライト本体が3回点滅します。

■ リモコンの電池交換


操作範囲がせまくなったり、リモコンを操作してもライトが動作しない場合は、新しい電池（CR2450）に交換してください。

- 1** リモコンの本体を片方の手でしっかり持ち、もう一方の手（手の平、または3本指など）で底面の滑り止めシートをぐっと押さえて、反時計回りに回し、電池蓋を外す

※ 作業中にライトが点灯してしまうことがあります。
ライトのUSBケーブルを抜いて作業してください。



- 2** 新しい電池を、正しい向きにセットする

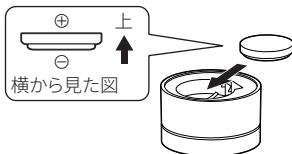

3

電池蓋をはめ、リモコン本体を片方の手でしっかり持ち、もう一方の手（手の平、または3本指など）で底面の滑り止めシートをぐっと押さえて、時計回りに回し取り付ける




・ カチッとなるまでしっかり回してください。

※ 使い終わった電池は、電池のパッケージに記載された廃棄方法、またはお住まいの自治体の取り決めにしたがって廃棄してください。

お手入れ

・ 汚れたら、柔らかい布で乾拭きしてください。

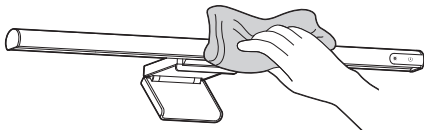

※ 水でぬらさないでください。

※ 化学薬品・クレンザー・酢・その他の洗剤を使用しないでください。

困ったときは

- 点灯しない

- USB電源またはパソコンなどのUSBポートと、本機のUSBポートが確実に接続されていることを確認してください。
- USB電源が確実にコンセントに接続されているか、またはパソコンやバッテリーの充電残量が十分にあるか確認してください。
- 電源と本機を接続しているUSBケーブルが断線していないか確認してください。
- USB Type-C↔Type-Cケーブルは使用できません。付属のUSB Type-A↔Type-Cケーブルを使用してください。

- リモコンで操作できない

- リモコンの電池が消耗している可能性があります。電池を新しいものに交換してください。(→13ページ)
- ペアリングが切れている可能性があります。再度ペアリングしてみてください。(→12ページ)

- 位置が安定しない

- しっかりした平行な面にクランプで取り付けられていることを確認してください。
- クランプ前部がモニター前端にすき間なく取り付けられていることを確認してください。

仕様


製品名	BrightBar Remote
型番	MT-BBR60
色温度	2900～6000K
演色性	Ra80
定格電源	DC5V（USB Type-Cポート）
定格消費電力	3.5W
寸法	幅420×高さ35×奥行90.5mm
重量	400g

保証とアフターサービス

- ・修理に関するご相談ならびにお取り扱い・お手入れに関するご不明な点は、**カスタマーサポート**までご連絡ください。
- 1) 保証書は必ず「購入日」と「注文番号」もしくはレシートなど所定事項の記入および記載内容をご確認ください。
- 2) 保証期間は、保証書に記載されています。保証書の内容に従って修理いたします。
- 3) 保証期間経過後の修理についても、カスタマサポートまでご連絡ください。修理によって機能が維持できる場合は、お客様のご要望により有償修理いたします。
- 4) 本機の補修用性能部品の保有期間は製造打ち切り後5年です。補修用性能部品とは、本機の機能を維持するために必要な部品です。
- 5) 海外での正常な動作は保証いたしません。また、アフターサービスもいたしません。

製品登録による延長保証

製品登録を行うと、通常保証2年間のところ、3年間まで保証を延長することが可能です。製品箱の裏面に貼付けてありますセキュリティシールのグレーの箇所をコインで優しく削っていただくと、シリアル番号が表示されます。会員登録後の公式ウェブサイトにて、ご注文番号、もしくは店舗名と合わせまして、製品登録に必要なシリアル番号をご入力いただくことで、製品登録ができます。



【製品登録ページ】

<https://matech-jp.com/serial-touroku/>



保証を受けるためのクイックガイド

- 1** レシートやお買い上げ明細、またはネットショップの注文番号をご用意ください。
- 2** LINE・公式サイトのカスタマーサポートのいずれかにより、ご連絡をお願いします。
できるだけ詳しい内容を記載いただけると迅速なサポートが行えます。
- 3** 各事象に応じて検査、修理、交換のご案内がございますので担当者の指示に従ってください。

保証書

製品名： BrightBar Remote

型番： MT-BBR60

保証期間： 2年間

購入日： 年 月 日

販売店：

注文番号：

※ Amazonの場合は、[XXX-XXXXXXX-XXXXXXX]
形式の数字になります。

《レシート貼付位置》

以下の条件にいずれか一つでも当てはまる
場合は保証対象外となります。

- レシートやお買い上げ明細の紛失や、注文番号が分からない場合
- 製品保証期間が過ぎている場合
- 製品を分解している場合
- 火災、地震、その他天災地変による故障及び損傷
- 一般家庭以外（たとえば業務用の長時間使用、車両、船舶への搭載）に使用された場合
- 非正規販売店でご購入した製品である場合
- 取扱説明書に明記している適切な保管や使用に従わなかった場合
- お客様の過失により本製品が故障または破損した場合
- 海外でのご使用の場合

Thank you for purchasing this product.

- Before use, be sure to read this manual and the "Safety Precautions" (pages 21-24) of this manual.
- This manual also serves as a warranty card. Please fill in the information "Purchased Date / Purchased Store" and keep it in a safe place even after reading.

Table of Contents

Safety Precautions.....	21	Specifications	36
Names of Parts.....	25	Warranty and After-Sales	
Precautions for Use	27	Service	37
How to Use.....	28	Extended Warranty with	
How to use Remote Control.	31	Product Registration.....	38
Care	34	Warranty Card	39
When in Trouble	35		

Safety Precautions

First, please read this "Safety Precautions" carefully and please use the product correctly. To prevent injury to persons and damage to property, the followings are instructions that must be followed.

Symbol Meaning

	This is a symbol indicating prohibition. Specific prohibited contents are shown in pictures or texts in or near the graphic symbols.
	This is a symbol indicating what you must do it. Specific instructions are shown in pictures or texts in or near the graphic symbols.



Caution

Indicates that improper handling may result in personal injury or property damage.



No

Disassembly

Do not disassemble, repair or modify.

It may cause fire, electric shock or injury.

For repairs, contact the store where you purchased the product.

Never disassemble the coin battery.

It may damage your skin and clothing.



Do not connect with anything other than a USB cable.

Do not connect to anything other than the USB terminal.


It may cause fire or electric shock.

Do not install upside down.

Do not attach to a surface with a round or slanted front end.

Do not install in places with low strength.

It may fall and cause injury.



Do not clamp the monitor screen.

When mounting on a monitor, make sure there is a bezel that is wide enough to be clamped by this product. If you clamp the screen part, it may cause damage to the screen.

Do not carry or store coin batteries with metal items.

It may cause a short circuit and cause explosion or liquid leakage.

Never charge a coin battery.

It may cause fire, injury or burns due to explosion or liquid leakage.



Keep coin batteries out of the reach of children.

It may cause accidental ingestion. If your child swallows the battery, consult a doctor immediately.


Do not use batteries other than those specified for the remote control.

It may cause fire, injury or stain the surrounding area due to explosion or liquid leakage.



When mounting, put on the front of the clamp close to the mounting position.

If there is a gap, it may wobble and fall.



Do not leave a gap.

When inserting the coin battery into the remote control, pay attention to the polarity indication (direction of plus ⊕ and minus ⊖) and insert it correctly according to the instruction manual.

If you make a mistake, it may cause a fire or injury to pollute the surrounding area due to explosion or liquid leakage.




Remove the coin battery when not using it for a long time.


It may cause fire or injury and stain the surrounding area due to the leakage of liquid. If the liquid leaks, wipe off the liquid on the battery case and then insert a new battery. If the leaked liquid gets on your body, wash it off thoroughly with water.

Names of Parts

■ Front

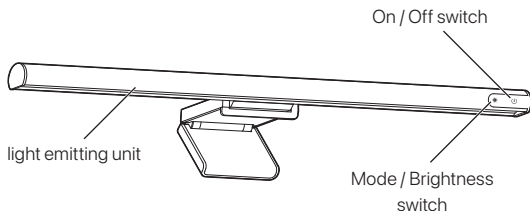


■ Rear

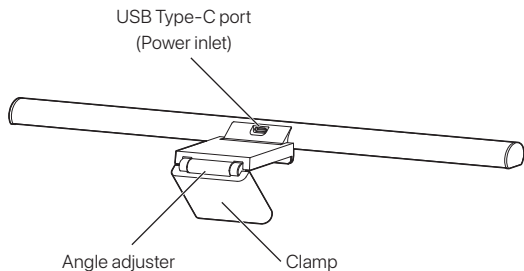

■ Accessory

USB Type-C↔Type-C cable (1.5m)



Remote controller

Control knob



Non-slip sheet (bottom)


Precautions for Use

- This product is not waterproof.
Be careful not to get it wet. Also, do not touch it with wet hands.
- Avoid using it in a salty environment such as the coast.
- Do not use it outdoors.
- When connecting or disconnecting cables of connected devices, be sure to hold the plug. Pulling on the cable may cause the wire to break.
- Malfunction may occur near microwave ovens and wireless devices.
- USB Type-C ↔ Type-C cable cannot be used. Be sure to use a USB Type-A ↔ Type-C cable, such as the one provided.


How to use

1 Attach to the monitor

- Spread the rear part of the clamp, hook the front part of the clamp to the front end of the monitor, and attach it so that the upper part of the monitor is sandwiched.

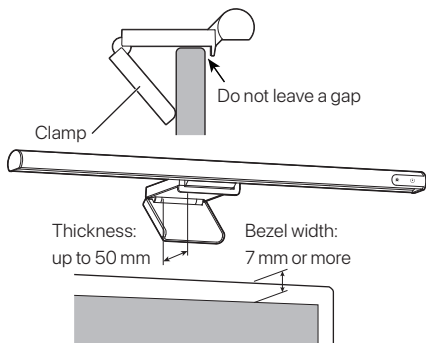

2 Connect the power supply and this unit with a USB cable

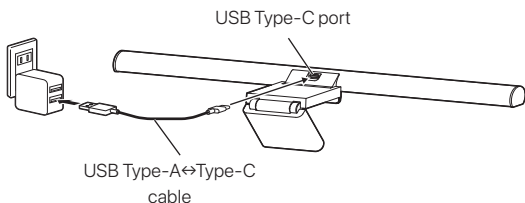


- When energized, the lamps of the operation switches light up.



The center of the switches light up


3 Touch the On / Off switch to turn on the light.



- * If you touch the On / Off switch while the light is on, it will turn off.

Change modes

- Each time you touch the mode / brightness switch, the lighting mode changes as follows.



- Even if the light goes out, the next time it goes on, it will go on in the same mode.


■ Brightness

- While the light is on, you can adjust the brightness by pressing and holding the mode / dimmer switch.



■ Adjust angle

- The angle of the light can be adjusted within a range of 40° back and forth. Move the light part while holding the clamp part at the back.

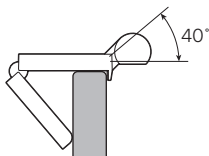

How to use Remote Control


- There is a non-slip sheet on the bottom of the remote control. You can use it by placing it on a desk.

■ On / Off

- Press the control knob to turn on the light.




- * If you press the control knob while the light is on, it will turn off.

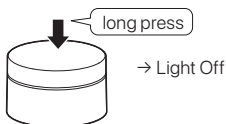

■ Change modes


- Each time you press the control knob, the lighting mode changes as follows.

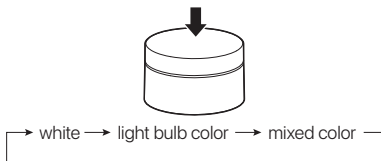

- Even if the light goes out, the next time it goes on, it will go on in the same mode.

■ Brightness

- While the light is on, turn the control knob clockwise to brighten the light and counterclockwise to dim it.

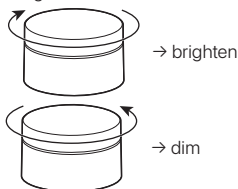

■ Pairing with the main unit

- The included remote control is shipped paired with the main light unit.

If the pairing is disconnected, re-pairing as follows.

Press and hold the control knob on the remote control within 10 seconds after turning on the power of the main light unit.



- If the pairing is complete, the main light unit will blink 3 times.

■ Battery replacement of Remote Control


If the operating range becomes narrow or the light does not work even if you operate the remote control, replace the battery with new one (CR2450).

- 1** Hold the main body of the remote control firmly with one hand, hold the non-slip sheet on the bottom firmly with the other hand (palm, three fingers, etc.), turn it counterclockwise, and remove the battery cover.

* The light may come on while you work. Please work after disconnecting the USB cable of the main light unit.



- 2** Set the new battery in the correct orientation

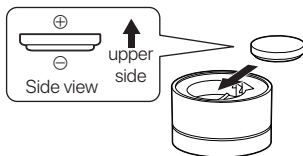

3


Put on the battery cover, hold the remote control body firmly with one hand, firmly press the non-slip sheet on the bottom with the other hand (palm, three fingers, etc.), and turn it clockwise to attach it.



- Turn it firmly until it clicks.
- * Dispose of used batteries according to the disposal method described on the battery package or the agreement of your local government.

Care

- When it gets dirty, wipe it dry with a soft cloth.

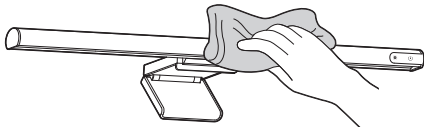

- * Do not get it wet with water.
- * Do not use chemicals, cleansers, vinegar or other detergents.

When in Trouble

- **Light does not turn on**
 - Make sure that the USB power supply or the USB port of your computer is firmly connected to the USB port of this unit.
 - Make sure that the USB power supply is securely connected to the AC outlet, or that the computer's battery is fully charged.
 - Check if the USB cable connecting the power supply and this unit is broken.
 - USB Type-C ↔ Type-C cable cannot be used. Use the included USB Type-A ↔ Type-C cable.
- **Cannot be operated with remote control**
 - The remote control battery may be dead. Replace the battery with a new one.(see page 31)
 - The pairing may be disconnected. Please try pairing again.(see page 30)
- **Position is not stable**
 - Make sure it is clamped to a rigid parallel surface.
 - Make sure that the front of the clamp is tightly attached to the front edge of the monitor.

Specifications

Product Name	BrightBar Remote
Model Number	MT-BBR60
Color temperature	2900 - 6000K
Color rendering properties	Ra80
Rated power supply	DC 5V (USB Type-C port)
Rated power consumption	3.5W
Dimensions	W 420 x H 35 x D 90.5 mm
Weight	400g

Warranty And After-Sales Service

- If you have any questions, please contact **Customer Support** for repair consultation, handling and care.
- 1) Warranty card must have "Date of Purchase" and "Order Number" or receipt. Please make sure to fill in the required information and confirm the contents.
- 2) The warranty period is stated on the warranty card. The product will be repaired accordingly.
- 3) For repairs after the warranty period, please contact Customer Support. If functionality can be maintained through repair, repair will be made at the customer's request for a fee.
- 4) The warranty period for repair performance parts for this machine is 5 years after discontinuation of production. Repair performance parts are those necessary to maintain the functionality of the product.

Extended Warranty with Product Registration

Register your product and your warranty will be extended to 3 years instead of the standard 2 years. Gently scrape the gray part of the security sticker, attached to the back of the product box, with a coin. The serial number will be displayed. After registering as a member, you will be able to access the official website. By entering the serial number required to register the product, along with your order number or store name, you can register your product.



【Product Registration Page】

<https://matech-jp.com/serial-touroku/>



Quick Guide to Obtaining The Warranty

1

Please get ready the purchased receipt, or the order number of the online store.

2

Please contact our Customer Support either through LINE or our official website. Please provide as much detail as possible so that we can provide you with prompt support.

3

Depending on the situation, you will be guided through the inspection, repair, or replacement process. Please follow the instructions by the person in charge.

Warranty Card

Product Name BrightBar Remote

Model Number MT-BBR60

Warranty Period 2 years

Purchased Date

Purchased Store

Order Number

<Receipt>

* For Amazon, order number is as [XXX-XXXXXXX-XXXXXXX].

**The warranty does not apply
if any one of the following conditions apply.**

- If you have lost your receipt or purchase receipt, or if you have lost your order number.
- If the product warranty period has expired.
- If the product has been disassembled
- Malfunction or damage due to fire, earthquake, or other natural disaster.
- By using the product outside of the home (e.g., prolonged use for business purposes or in a car, onboard a vehicle or ship)
- The product was purchased from a non-authorized dealer.
- The proper storage and use of the product as specified in the instruction manual was not followed.
- If the unit malfunctions or is damaged due to the customer's negligence.

MATECH

<https://matech-jp.com/>